



ESC Series Engine Shutdown Control

ESC-0604-04D (6 Circuit, (2) 15 Amp, (4) 2 Amp)
ESC-0622-04D (6 Circuit, (4) 15 Amp, (2) 2 Amp)
ESC-0640-04D (6 Circuit, (6) 15 Amp, (0) 2 Amp)
ESC-0806-04D (8 Circuit, (2) 15 Amp, (6) 2 Amp)
ESC-0824-04D (8 Circuit, (4) 15 Amp, (4) 2 Amp)
ESC-0842-04D (8 Circuit, (6) 15 Amp, (2) 2 Amp)
ESC-0860-04D (8 Circuit, (8) 15 Amp, (0) 2 Amp)
ESC-1044-04D (10 Circuit, (6) 15 Amp, (4) 2 Amp)
ESC-1062-04D (10 Circuit, (8) 15 Amp, (2) 2 Amp)
ESC-1080-04D (10 Circuit, (10) 15 Amp, (0) 2 Amp)

Owner's Manual
&
Installation Instructions



Read and comply with all instructions, warnings and limitations before installing, servicing or removing this device.

Additional copies of this manual are available at no charge by contacting the manufacturer, distributor or dealer. Fireboy-Xintex reserves the right to change features without notice.

General Information	3
Specifications	3
Operation of Fireboy Engine Shutdown/Override System	5
Installation	6
Installing the Engine Shutdown Control Module	6
Installing the Helm Display Unit	6
Electrical Connections	6
Testing the Engine Shutdown System	8
Maintenance	8
Repairing a Fireboy Engine Shutdown Control Component(s)	8
Returning a Fireboy Engine Shutdown Control Component(s)	8
Wiring Examples	9
1 Year Limited Warranty	10

General Information

The Fireboy Engine Shutdown Control (ESC) Systems are an effective means to automatically shut down engines, generators, and blower systems in the event of a fire. By shutting down your engine room systems, you will ensure that the fire cannot be fueled by the continued operation of components on the engine as well as maintaining the proper agent concentration needed to extinguish the fire.

The Engine Shutdown Control System consists of a Shutdown Control Module and a Helm Display Unit with an Override button. Both should be installed at the helm so that there is access to the ignition wiring.

Specification

System Specifications (ESC-0604-04D)

Operating Voltage: 9-32V DC

Maximum Current Draw: 211mA @ 12V DC

Operating Temperature: 22°F (-6°C) to 158°F (70°C)

Circuits: (2) 15 Amp, (4) 2 Amp

System Specifications (ESC-0622-04D)

Operating Voltage: 9-32V DC

Maximum Current Draw: 211mA @ 12V DC

Operating Temperature: 22°F (-6°C) to 158°F (70°C)

Circuits: (4) 15 Amp, (2) 2 Amp

System Specifications (ESC-0640-04D)

Operating Voltage: 9-32V DC

Maximum Current Draw: 211mA @ 12V DC

Operating Temperature: 22°F (-6°C) to 158°F (70°C)

Circuits: (6) 15 Amp

System Specifications (ESC-0806-04D)

Operating Voltage: 9-32V DC

Maximum Current Draw: 233mA @ 12V DC

Operating Temperature: 22°F (-6°C) to 158°F (70°C)

Circuits: (2) 15 Amp, (6) 2 Amp

System Specifications (ESC-0824-04D)

Operating Voltage: 9-32V DC

Maximum Current Draw: 233mA @ 12V DC

Operating Temperature: 22°F (-6°C) to 158°F (70°C)

Circuits: (4) 15 Amp, (4) 2 Amp

System Specifications (ESC-0842-04D)

Operating Voltage: 9-32V DC

Maximum Current Draw: 233mA @ 12V DC

Operating Temperature: 22°F (-6°C) to 158°F (70°C)

Circuits: (6) 15 Amp, (2) 2 Amp

System Specifications (ESC-0860-04D)

Operating Voltage: 9-32V DC

Maximum Current Draw: 233mA @ 12V DC

Operating Temperature: 22°F (-6°C) to 158°F (70°C)

Circuits: (8) 15 Amp

System Specifications (ESC-1044-04D)

Operating Voltage: 9-32V DC

Maximum Current Draw: 255mA @ 12V DC

Operating Temperature: 22°F (-6°C) to 158°F (70°C)

Circuits: (6) 15 Amp, (4) 2 Amp

System Specifications (ESC-1062-04D)

Operating Voltage: 9-32V DC

Maximum Current Draw: 255mA @ 12V DC

Operating Temperature: 22°F (-6°C) to 158°F (70°C)

Circuits: (8) 15 Amp, (2) 2 Amp

System Specifications (ESC-1080-04D)

Operating Voltage: 9-32V DC

Maximum Current Draw: 255mA @ 12V DC

Operating Temperature: 22°F (-6°C) to 158°F (70°C)

Circuits: (10) 15 Amp

All above Current Draws represent a single Helm Display Unit.

Add an additional 25mA when using a second Helm Display Station.

Operation of Fireboy Engine Shutdown/Override System

The Fireboy Engine Shutdown Control (ESC) System operates by means of relays. The Shutdown Control Module is connected to the Fireboy Extinguisher by means of the Pressure Switch. When the Pressure Switch opens on the Fireboy Extinguisher, the relays on the Shutdown Control Module activate, disconnecting or connecting power to the connected systems.

The Status of the Engine Shutdown Control (ESC) System is displayed on the Helm Display Unit. The Helm Display Unit has a Green and a Red LED located on the face, and a button to control Override Mode. The Green LED will be illuminated in normal operation, indicating that the Fire Extinguisher is charged. If the Extinguisher's pressure drops, then the Green LED will turn OFF and the Red LED and horn will turn ON.

Press the Override button to activate the Override Mode. The Red LED will begin flashing, indicating that you are now in Override Mode. You will now be able to restart your engines and maneuver the vessel to safety. The Shutdown Control/Override System will remain in Override Mode until it is manually deactivated by pressing the Override button while the system is powered. To notify you that you are still in Override Mode, each time power is reset to the displays, both LEDs will illuminate, and the system will produce multiple beeps, then the Red LED will begin flashing. Press the Override button again to exit Override Mode.

CAUTION:

WHEN USING TWO HELM DISPLAY UNITS IT IS BEST PRACTICE TO USE ONLY THE PRIMARY DISPLAY FOR OVERRIDE FUNCTION. WHEN ONE DISPLAY IS IN OVERRIDE MODE IT IS NOT POSSIBLE FOR THE OTHER DISPLAY TO TELL THE DIFFERENCE BETWEEN OVERRIDE AND OK BECAUSE THEY ARE WIRED IN PARALLEL. THIS RESULTS IN THE REMOTE DISPLAY SHOWING OK EVEN THOUGH THE SYSTEM IS IN OVERRIDE.

The DU-SBH-20 also has a button to control the brightness of the Green LED. Whenever the unit is first powered on, the Green LED will be at its brightest setting. Press the button to cycle through the three LED brightness settings.



DU-SBH-20

Installation

Installing the Engine Shutdown Control Module

The Engine Shutdown Control Module should be located near the helm where convenient access to the ignition wiring is available. Use appropriate length #8 screws and secure using all 4 mounting holes.

CAUTION:

NEVER INSTALL THE ENGINE SHUTDOWN CONTROL MODULE IN A BILGE AREA OR ENGINE ROOM.

Installing the Helm Display Unit


The Helm Display should be located at the instrument panel, so that the visible and audible indicators may be easily observed.

Drill a 2-1/8" hole to accommodate the DU-SBH-20 and DU-SBH-21.

Insert Display Unit into hole and secure with the provided threaded mounting nut.

Electrical Connections

Wiring must be made using #16 stranded copper wire conforming to ABYC Standards for Marine use, as a minimum (SAE J378B & J1128). Connections to the terminals must be made with bare wire. Route wires through the loosened strain reliefs on the side of the box, closest to the terminal being used. Additional strain reliefs may be added, Fireboy-Xintex P/N: 63020 (Heyco P/N: M3216), clearance hole is .813in (20.6mm). The Terminal strips disconnect from the Engine Shutdown Control Module for easier installation.

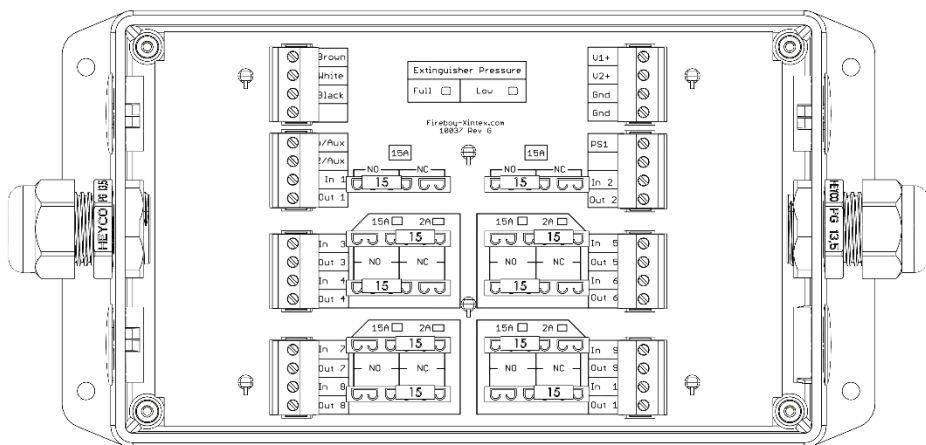

Connect the Engine Shutdown Control Module's "V1+" Terminal to a power source through a 2 Amp Breaker. Connect the "Gnd" Terminal to battery ground.

The Terminals labeled "Brown", "White", and "Black" connect the Helm Display Unit to the Engine Shutdown Control Module. Connectors are provided on each component.

Terminals "PS1" & "GND" connect the Fireboy Fire Extinguisher to the Engine Shutdown Control Module. In applications that require multiple extinguisher systems, the pressure switches must be wired in series to allow any extinguisher to operate the Engine Shutdown Control Module.

A Helm Display unit that displays an Auxiliary Extinguisher System is also available (DU-SBH-21). Connect the Auxiliary Fireboy Fire Extinguisher to "PS2" and "Gnd" on the Engine Shutdown Control Module. Connect the Yellow wire from the DU-SBH-21 to the "Ylw/Aux" Terminal.



DU-SBH-21

Input Terminals are provided to connect control/ignition switches to the Engine Shutdown Control. The Positive Battery Terminal must be wired to each control/ignition switch and then to the corresponding Input Terminal (Ex: "In 4"). The provided Fuses are used to configure each independent circuit as Normally Open (NO) or Normally Closed (NC). They also protect the Engine Shutdown Control (ESC) from damage due to short circuits or overloads. With the fuse in the correct position based on the engine/system manufacture's specifications, connect the desired engine/system to the corresponding Output terminal (Ex: "Out 4").

- Gasoline engines must be shut down by interrupting the primary ignition wire from the ignition switch to the ignition coil. This can be implemented by utilizing the Common (C) and Normally Closed (NC) Terminals.
- Diesel engines must be shut down by interrupting the fuel source. Some models of fuel solenoids close when voltage is added, while other fuel solenoids close when voltage is taken away. Verify how each of your fuel solenoids operate before wiring.

Tighten strain reliefs to secure wires when all connections have been made. A Wiring example is provided on page 9.

Testing the Engine Shutdown System

The Engine Shutdown System can be tested by disconnecting either wire connection at the Pressure Switch on the Fire Extinguisher. When the wire is disconnected, the engine shutdown will activate. Verify that engines shut down and that all other equipment operates as expected. The Helm Display unit will indicate that the Fire Extinguisher has discharged with a Red LED and audible horn. Test the Helm Display by turning the ignition to the ON position. Press the "Override" button, to activate the Override Mode. The Red LED will begin flashing, indicating that you are now in Override Mode. You will now be able to restart your engines. Reconnect the wire at the Pressure Switch and deactivate Override Mode.

Maintenance

The system should be tested periodically in the fashion described in the previous section.


Repairing Fireboy Engine Shutdown Control Component(s)

Fireboy Engine Shutdown Controls are not field serviceable. Components must be returned to the factory for any repairs.

Returning Fireboy Engine Shutdown Control Component(s)

No product may be returned for credit or repair without a written "Returned Material Authorization" (RMA) form. Purchaser must call or email Fireboy-Xintex 616-735-9380 or fireboy@fireboy-xintex.com for an RMA. For international customers, call or email Fireboy-Xintex UK Operations Limited +44 (0) 845 389 9462 or fireboyeu@fireboy-xintex.com. If due to extenuating circumstances a product is to be returned, after approval it must be received in 100% new/resalable condition. Products stored by the buyer for more than 26 weeks may not be returned for any reason. Maintaining fresh and current inventory is the responsibility of the buyer.

Wiring Example
ESC Series

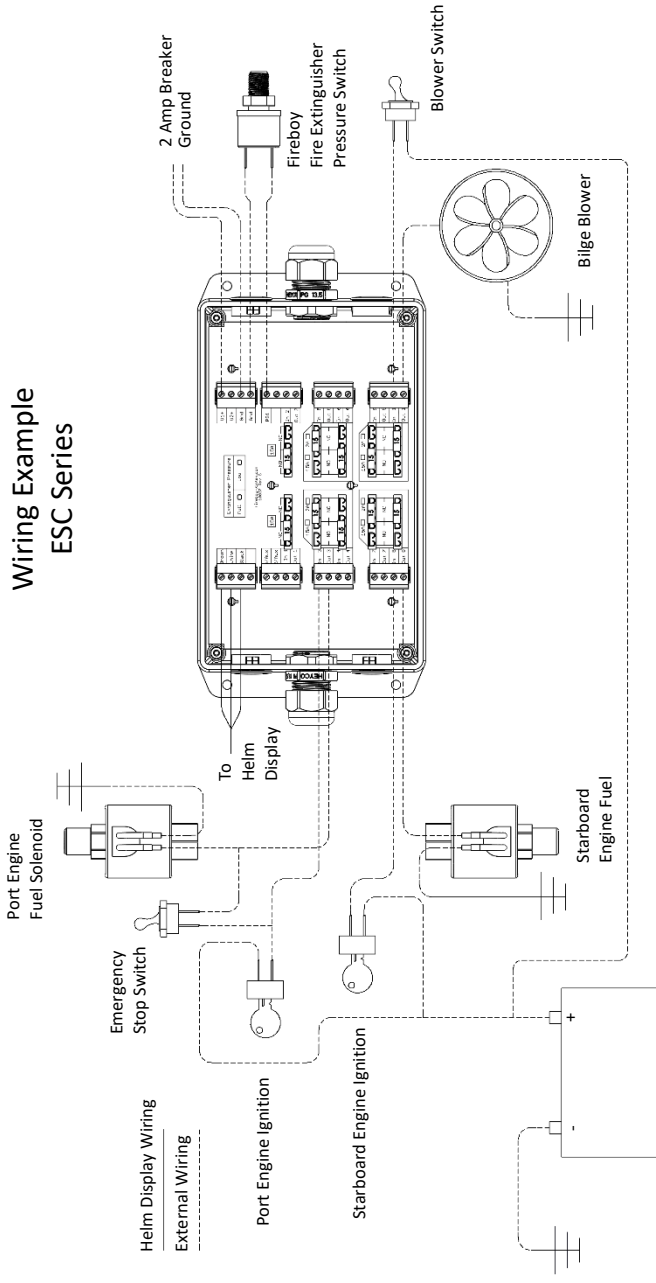

1 Year Limited Warranty

This Warranty is in lieu of all other expressed or implied Warranties

Seller warrants title, materials, and workmanship on equipment, except components manufactured by others for which the Seller assigns, as permitted, the original manufacturer's warranty. Seller's warranty shall be for a period of (1) one year from the date of sale to the ORIGINAL CONSUMER PURCHASER, during which non-conforming equipment returned to the Seller at Buyer's expense and risk, be repaired or replaced at the Seller's option. Fireboy-Xintex will repair or replace products found to be defective in materials or workmanship within the period set forth above, provided that: (a) the product has not been subjected to abuse, contamination, neglect, accident, incorrect wiring not our own, improper installation or servicing, or used in violation of instructions furnished by Fireboy-Xintex and (b) as to any prior defects in materials or workmanship covered by this warranty, the product has not been repaired or altered by anyone except Fireboy-Xintex and (c) the serial number has not been removed, defaced or otherwise changed, and (d) examination discloses, in the judgment of Fireboy-Xintex, does not assume the costs of removal and/or installation of the product or any other incidental costs of removal and/or installation of the product or any other incidental costs which may arise as a result of any defect in material or workmanship, and (e) upon discovery of defect, Buyer shall immediately cease use of and notify Fireboy-Xintex.

Any warranty implied by law, including warranties of merchantability or fitness, is in effect only for the duration of the expressed warranties set forth above, no person is authorized to give any other warranty, or to assume for Fireboy-Xintex any other liability in connection with the sale of its products; Fireboy-Xintex shall not be liable for the loss of use, revenue, or profit or for any injury, or for any other consequential or incidental damages, buyer is not relying on seller's judgment regarding his or her particular requirements, and has had an opportunity to inspect the product to his or her satisfaction.

This warranty gives you specific legal rights, and you may also have other rights, which vary, from location to location.

Contact information listed below. For US customers, contact Fireboy-Xintex. For international customers, contact Fireboy-Xintex UK Operations Limited.

www.fireboy-xintex.com

Fireboy-Xintex
O-379 Lake Michigan Dr. NW
Grand Rapids, MI 49534
fireboy@fireboy-xintex.com
Phone (616) 735 9380

Fireboy-Xintex UK Operations Limited
10 Holton Road, Holton Heath Trading Park
Poole Dorset BH16 6LT UK
fireboyeu@fireboy-xintex.com
Phone +44 (0) 845 389 9462